

Disinfecting Computers, Printers, Screens, Keyboards, USB Cameras, Speakerphones, and Other Shared Technology

Before and after use, wipe down the device's touch points using the ethanol or isopropyl alcohol spray or wipes.

All commonly touched surfaces should be wiped down with a moist wipe or microfiber cloth, including:

- Remote Controls and Touchpanel Controllers
- Shared Computers, Tablets, Keyboards, Mice and Presentation Remotes
- Wireless Microphone Transmitters
- HDMI and USB Cables
- Document Cameras
- Any other surfaces you have touched

DO NOT:

- Use disinfectant other than ethanol or isopropyl to clean devices
- Spray disinfectant into any device, clean exterior surfaces only, use caution on open areas, such as microphone grills, computer vents, etc.
- Use any disinfectant on camera or projector lenses